

# Cheat Sheet

## TRACK SELECTION MENU

**Enter Track Selection Menu:** Press **TRACK** to access Track Selection Menu.

**Select Track:** Enter Track Selection Menu, then press a track button (output jacks correspond to tracks). You are now in the selected Track View mode for step editing.

**Track Mute:** In Track Selection Menu press and hold **TRACK**, then press the track you wish to mute.

**Track Solo:** In Track Selection Menu press and hold **PAGE**, then press the track you wish to solo.

**Un-solo Track (Enable All Tracks):** In the Track Selection Menu, press and hold **PAGE**, then press the soloed track to disable solo mode and re-enable all tracks.

**Clear Track:** In Track Selection Menu press and hold the button of the track to clear it completely.

## STEP EDITING

**Activate/Deactivate Step:** In Track View Mode, short press a Step Button.

**Edit Note/Pitch CV (tracks with CV):** In Track View Mode, press and hold a step button to enter Note Edit Mode, and use the buttons to select notes. Choose octave with upper two buttons.

**Edit Probability:** In Track View Mode, press and hold the **TRACK** button, then press a step, and select the desired probability. (12.5%, 25%, 37.5%, 50%, 62.5%, 75%, 87.5%, 100%).

**Tie Steps:** In Track View Mode, press and hold two step buttons to tie them together.

**Un-Tie Steps:** In Track View Mode, press a step button in the tied notes chain.

**Edit Current Page Length:**

**Reduce Page Length:** In Track View Mode, press and hold **PAGE** button, then press the shorter desired page length using one of the lit step buttons.

**Extend Page With Empty Steps:** In Track View Mode, press an empty step up to which you want to extend the page.

**Extend Page With Filled Steps:** In Track View Mode, press and hold **PAGE** button, press an empty step up to which you want to extend the page with filled steps.

## PAGE SELECTION MENU

**Enter Page Selection Menu:** Press **PAGE** to access Page Selection Menu.

**Select Page:** Enter Page Selection Menu, then press a page button.

**Page Skip/Un-skip:** In Page Selection Menu press and hold **TRACK**, then press the page you wish to skip/un-skip.

**Edit track length:**

**Add Empty Pages:** In Page Selection Menu press an unused page button up to which you

want to extend the track.

**Add Cloned Pages:** In Page Selection Menu press and hold **PAGE** and press an unused page button up to which you want to extend the track with clones of the last page.

**Remove Pages:** In Page Selection Menu press and hold **PAGE** and press a page button up to which you want to shorten the track to.

**Clear Page:** In Page Selection Menu press and hold the button of the page to clear it completely.

## TRACK SETTINGS

**Enter Track Settings:** Long-press **TRACK** to access Track Settings for the selected track.

**Step Length:** In Track Settings, press **STEP LEN**, then select the step length (1, 2, 3, 4, 6, 8, 12 up to 16 or 24 pulses).

**Gate Length:** In Track Settings, press **GATE LEN**, then select the gate length (0, 0.5, 5, 10, 20, 30, 40) ms or complete step length.

**Playing Order:** In Track Settings, press **ORDER**, then choose a playing order (up, down, pendulum, ping-pong, random).

**Reset Mode:** In Track Settings, press **RESET MODE**, then set reset mode (auto, auto+ext, ext only, ...).

**Track Colour:** In Track Settings, press **COLOUR**, then choose colour.

**Glide Length (tracks with CV):** In Track Settings, press **GLIDE LEN**, then select a glide time (0, 50, 100, 200, 300, 400, 500) ms up to a full step glide length.

**Set Default Chord Type (Triad Track):** In Track Settings, press **CHORD TYPE**, then select a triad chord: maj, min, dim, aug.

**Arpeggiator (tracks with CV):** In Track Settings, press and hold **CHORD TYPE** to enable/disable arpeggiator mode. Select type: maj triad, min triad, dim triad, aug triad, maj 7<sup>th</sup>, min 7<sup>th</sup>, dom 7<sup>th</sup>, sus 2<sup>nd</sup>.

**Step Record:** In Track Settings, press **STEP REC**. Set octave with upper two buttons. (For a Triad Track cycle through triad type options using the **COLOUR** button). Play notes or enter a rest using the **STEP REC** button. Exits automatically when reaching the end of the track page or by manually pressing **TRACK** once.

**Live mini keyboard:** Set page length to 1 step of track with CV. In Track Settings, press **STEP REC**.

## GLOBAL SETTINGS

**Enter Global Settings:** Long-press **PAGE** to access Global Settings.

**Load Song:** In Global Settings, press **LOAD**, then select a bank and slot to load a saved song.

**Save Song:** In Global Settings, press **SAVE**, then select a bank and slot to save the current song.

**Set Track Configuration:** In Global Settings, press **CONFIG**, then choose the desired configuration (4x Gate, 1x Gate/CV Track + 2x

Gate, 2x Gate/CV, 1x Gate/CV + 2x CV, Triad, 4x CV)

! Current tracks will be lost !

**Change Tempo (default 120 BPM):**

**Tempo Up (internal clock):** In Global Settings, press **TEMPO UP** to add 1 BPM.

**Tempo Down (internal clock):** In Global Settings, press **TEMPO DOWN** to decrease 1 BPM.

**Tempo Tap (internal clock):** In Global Settings, tap **TEMPO TAP** to set the tempo. The LED shows also current tempo when using external clock source.

**Restore Default Tempo (120 BPM):** Long-press **TEMPO TAP**.

**Extra Menu:** In Global settings, press **EXTRA**.

**Set Clock and Reset Jack:** In Extra Menu, press **STEP LEN**. Then select in the other button column/row your setup: ext.clock+ext.reset, int.clock+ext.reset, ext.clock+int.reset or int.clock+int.reset.

**Set Clock Resolution:** In Extra Menu, press **GATE LEN**. Then select in the other button column/row your clock resolution: 1, 4, 8, 12, 16 or 24 PPQN.

**Set LED Brightness:** In Extra Menu, press **ORDER**. Then select in the other button column/row your brightness. (Selecting the lowest brightness setting will turn off inactive step LEDs completely and enable a page length indicator).

**Set CV Voltage Setting:** In Extra Menu, press **RESET MODE**. Then select in the red button column/row your voltage output setting: 1V/Oct, 1.2V/Oct or Hz/V.

**Set CV Non-Active Step Behaviour:** In Extra Menu, press **RESET MODE**. Then select in the right green button column/row: hold last voltage or 0V.

**Set Gate/Trigger Voltage:** In Extra Menu, press **RESET MODE**. Then select in the blue button column/row: 5V or 8V.

**Factory Settings:** In Extra Menu, press **COLOUR**. Select in the other button column/row:

- reset global settings to default values (! will reset module !)
- delete all saved songs
- reset global settings to default values and delete all saved songs (! will reset module !)

**Show Firmware Version:** In Extra Menu, press **GLIDE LEN**.

## REBOOT

**Reboot Module:** Press and hold the **TRACK**, **PAGE**, **STEP REC** and **▶▶** buttons simultaneously until the module restarts.

# Menu Overview

Track Settings		
1 Step Length	1.1 1 Pulse	
	1.2 2 Pulses	
	1.3 3 Pulses	
	1.4 4 Pulses	
	1.5 6 Pulses	
	1.6 8 Pulses	
	1.7 12 Pulses	
	1.8 16 or 24 Pulses	
2 Gate Length	2.1 Gate Off	
	2.2 0.5 ms	
	2.3 5 ms	
	2.4 10 ms	
	2.5 20 ms	
	2.6 30 ms	
	2.7 40 ms	
	2.8 Full Step Length (default)	
3 Order	3.1 Up (default)	
	3.2 Down	
	3.3 Pendulum	
	3.4 Ping-Pong	
	3.5 Random	
4 Reset Mode	4.1 Auto + External Reset (default)	
	4.2 Auto	
	4.3 External Reset	
	4.4 By Longest Track	
	4.5 By Longest Track + External Reset	
	4.6 Auto + By Longest Track + External Reset	
	4.7 Random In Tempo	
	4.8 Random Free	
5 Colour	5.1 Red	
	5.2 Orange	
	5.3 Yellow	
	5.4 Green	
	5.5 Cyan	
	5.6 Blue	
	5.7 Indigo	
	5.8 Pink	
6 Glide Length	6.1 No Glide (default)	
	6.2 50 ms	
	6.3 100 ms	
	6.4 200 ms	
	6.5 300 ms	
	6.6 400 ms	
	6.7 500 ms	
	6.8 Complete step	
7 Chord Type	7.1 Triad Track	7.1.1 Major Triad
		7.1.2 Minor Triad
		7.1.3 Diminished Triad
		7.1.4 Augmented Triad
		7.2.1 Major Triad
		7.2.2 Minor Triad
		7.2.3 Diminished Triad
		7.2.4 Augmented Triad
	7.2 GateCV Track / CV Track	7.2.5 Major Seventh
		7.2.6 Minor Seventh
		7.2.7 Dominant Seventh
		7.2.8 Suspended 2
8 Step Record		

Global Settings			
1 Load Song			
2 Save Song			
3 Configuration	3.1 4x Gate		
	3.2 1x Gate/CV + 2x Gate		
	3.3 2x Gate/CV		
	3.4 1x Gate/CV + 2x CV		
	3.5 1x Gate + 3x CV (Chord)		
	3.6 4x CV		
4 Extra	4.1 Clock + Reset Settings	4.1.1 External Clock + External Reset	
		4.1.2 Internal Clock + External Reset	
		4.1.3 External Clock + Internal Reset	
		4.1.4 Internal Clock + Internal Reset	
	4.2 Clock Resolution	4.2.1 1 PPQN	
		4.2.2 4 PPQN	
		4.2.3 8 PPQN	
		4.2.4 12 PPQN	
		4.2.5 16 PPQN	
		4.2.6 24 PPQN	
	4.3 LED Brightness	4.3.1 Lowest	
		4.3.2 30%	
		4.3.3 40%	
		4.3.4 50%	
		4.3.5 60%	
		4.3.6 70%	
		4.3.7 80%	
		4.3.8 Highest	
	4.4 Output Voltage Settings	4.4.1 CV Voltage Setting	4.4.1.1 1 V/Oct (default)
			4.4.1.2 1.2 V/Oct
		4.4.1.3 Hz/V	
4.4.2 CV Non-Active Step Behaviour		4.4.2.1 Hold last value (default)	
	4.4.2.2 0 V		
	4.4.3 Gate/Trigger Voltage	4.4.3.1 5 V (default)	
	4.4.3.2 8 V		
4.5 Factory Settings	4.5.1 Reset Global Settings		
	4.5.2 Delete All Songs		
	4.5.3 Reset Global Settings + Delete All Songs		
4.6 Show Firmware Version			
5 Tempo Up			
6 Tempo Down			
7 Tempo Tap			
8 Play/Pause/Stop			